

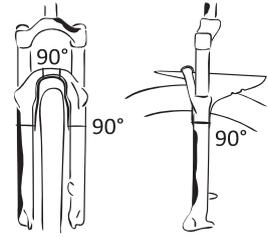


KOLLOSS

12 pre-punched additional mounting options for mounting at the rear frame. Drill by yourself if necessary.

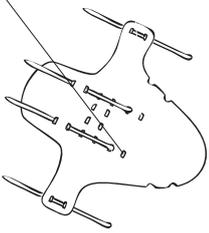

For optimum grip always install the cable ties at right angles. Shorten protruding ends of the cable ties.

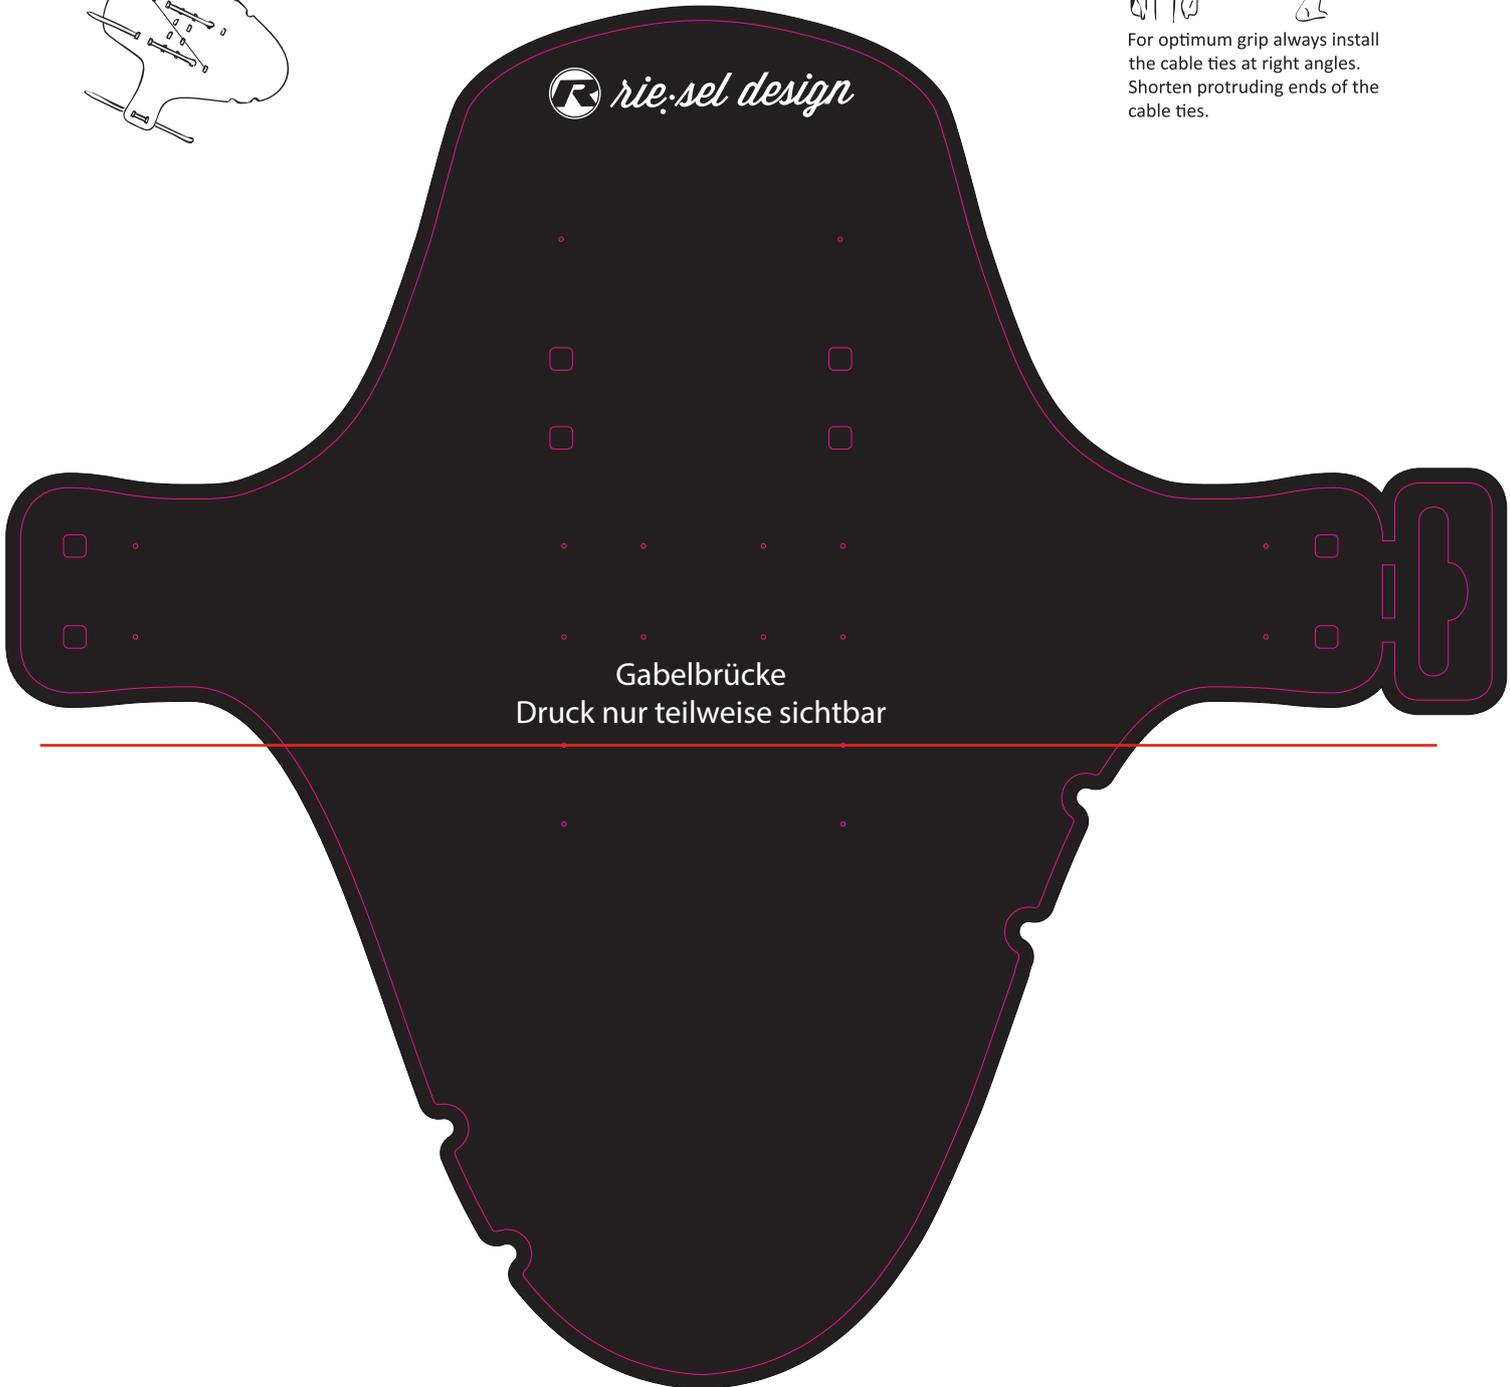

Pantone Farbnummern:

